

Modbus TCP device connection status codes

The TCP error codes were revised in a more recent version of the operating system. We have found that documentation in the 'Quick Help' section in some older devices did not get updated along with the code. The updated TCP connection status for Modbus TCP devices should be as follows:

5 = Connection failed, unable to bind (usually means remote device not connected or not reachable)

81 = Connection in progress (means unsuccessful connect attempt, still trying)

95 = Network is unreachable

97 = Connection aborted

98 = Connection reset by peer

103 = Connection timed out

104 = Connection refused

107 = Host is unreachable

Article ID: 11

Created On: Fri, Dec 14, 2012 at 12:30 PM

Last Updated On: Fri, Dec 14, 2012 at 12:30 PM